

Imprimantes

- [Dip Switch \(Imprimante Epson\)](#)

Dip Switch (Imprimante Epson)

TM-T88IV - V

SERIE

DSW1: ON: 7 / OFF: 1-2-3-4-5-6-8

DSW2: **OFF: ALL**

ETHERNET

DSW1: **OFF: ALL**

DSW2: ON: 8 / OFF: 1-2-3-4-5-6-7

TMU220B

SERIE

DSW1: **OFF: ALL**

DSW2: ON: 2 / OFF: 1-3-4-5-6-7-8

ETHERNET

DSW1: **OFF: ALL**

DSW2: ON: 2-4 / OFF: 1-3-5-6-7-8

,

AUTRES

DSW1: **OFF: ALL**

DSW2: ON: 3-6 / OFF: 1-2-4-5-7-8

TM-T88IV / TM-T88V

cb3efd87-c486-cfc1-c15d-72c0b507b219

TM-T88II / TM-T88III

08cdedbd-0814-879c-576a-a167e6e8bbce

SNBC

c9651bb2-034d-ca1b-3ff1-b36c30dca72c

7b06e189-f878-3b16-67e7-59ea5dee7a7e